



40 Huntingwood Drive Huntingwood NSW 2148

Phone: (02) 8825 1999 Website: www.aeroflowperformance.com

INSTALLATION MANUAL

AEROFLOW PERFORMANCE RB30 FUEL RAIL KIT

Item list included in this kit:

- 1x Billet Fuel Rail to suit RB30
- 4x Billet Mounting brackets
- 2x -8AN O-ring to -8AN adaptors
- 2x -8AN O-ring to -6AN adaptors
- 1x -6AN O-ring to -6AN adaptor
- 1x -6AN O-ring slim line port plug
- 1x -8AN O-ring slim line port plug
- 6x Black injector O-rings (Outer diameter = 14.90mm, inner diameter = 7.80mm)
- 6x Orange injector O-rings (Outer diameter = 14.90mm, inner diameter = 7.10mm)
- 6x Injector seat rubber adaptors (Outer Diameter = 14.60mm, inner diameter = 8.75mm)
- 6x C-Clips
- 4x M6 x 1mm socket cap screws (UHL 19.75mm)
- 4x M6 x 1mm socket cap screws (UHL 24.90mm)

Additional items required that does not come with kit:

- Hose fittings or barb fittings to connect to your current fuel line (rubber or braid)
- Fuel hose for feed line and return line
- Aftermarket fuel regulator
- Aftermarket 14mm O-ring fuel injectors

WARNING!

BEFORE PROCEEDING WITH INSTALLATION PLEASE READ INSTRUCTIONS CAREFULLY. THIS PRODUCT REQUIRES DETAILED KNOWLEDGE OF AUTOMOTIVE SYSTEMS. WE RECOMMEND THAT THIS INSTALLATION BE CARRIED OUT BY A QUALIFIED AUTOMOTIVE TECHNICIAN.

THE INSTALLATION OF THIS PRODUCT REQUIRES THE HANDLING OF FUEL. WE RECOMMEND TO WORK IN A WELL VENTILATED AND WEAR APPROPRIATE SAFETY WEAR FOR PROTECTION.

KEEP ALL IGNITION SOURCES AND OPEN FLAMES AWAY FROM VEHICLE AT ALL TIMES WHILE INSTALLING THIS PRODUCT.

THESE FUEL RAILS UTILIZE O-RING SEALED AN STYLE PORTS AND DO NOT REQUIRE THREAD SEALANT ONLY AN APPROPRIATE LUBRICATE SHOULD BE USED

INTRODUCTION

Congratulations on your purchase of aeroflow performance billet fuel rail. Aeroflow Performance Products cannot and will not be responsible for any damage, or other conditions resulting from misapplication of the parts described herein. However, it is our intention to provide the best possible products for our customer, products that perform properly and satisfy your expectations. Should you have any questions, please call technical support at +61 2 8825 1900 and have the product part number on hand when calling. This product suits rb30 engines and suits full length injectors 60.65mm (2-25/64")

STEP 1: REMOVAL

1. Please refer to the factory service manual of the vehicle for the correct removal of the factory fuel rail.
2. Disconnect the negative terminal on the battery.
3. Clean the area around the fuel rail to prevent dirt getting into injector holes and blocking them.
4. Remove the fuel cap to relieve all pressure from fuel system
5. Disassemble the factory fuel rail from the vehicle, keep all fuel rail spacers and bolts as these may need to be reused.

STEP 2: ASSEMBLY

1. Install the -6AN or -8AN supplied in kit onto either end of the fuel rail. The -8AN O-ring side of the fitting into the fuel rail. Be careful not to damage the thread when doing so.
2. Install either the -6AN O-ring plug or -6AN fitting to the centre of the rail depending on if you wish to run a single or dual feed setup with the vehicle. Also included in kit is an -8AN O-ring plug for the end of the rail if you to run a single feed setup from the centre port. If unsure please consult a professional.

3. Install aftermarket injectors into the fuel rail, ensure O-rings are not pinched when installing injectors. Always use appropriate lubrication on fuel injector O-rings.
 - I. Aftermarket injectors must be used. Can either be 14mm direct fit or 11mm with the use of AF889 (injector insert adaptors) not included in this kit.
 - II. If the length of the injectors are not 60.65mm than an appropriate length adapter must be purchased separately and installed.
 - III. We recommend the use of new injector O-rings if re-using the standard injectors

STEP 3: INSTALLATION

1. Install the necessary brackets on to fuel rail on the left and right side. Using the bolts provided and torqued to specs.
2. Install the injector adaptor and/or injector O-rings into the intake manifold using the appropriate lubrication. Ensure O-rings are seated correctly before proceeding.
3. Install fuel rail and injectors onto intake manifold with bolts and spacers provided in the kit. Do not fully tighten fuel rail to manifold until all injectors are correctly seated into the injector adaptors.
4. Tighten all mounting bolts to correct torque specs. Do not overtighten this may cause damage to fuel rail and injectors.
5. Install the fuel pressure regulator.
 - I. If an aftermarket fuel pressure regulator is required please consult a professional or our sales team to provide options.
6. Install fuel feed lines and return lines to correct positions depending on the setup that is required for the vehicle. Refer to diagram at the end of this instruction as a guideline only. Ensure enough slack is left in the line as to not put pressure on the fuel rail with engine running.
7. Reconnect wiring harness and all connectors as per factory service manual. If using non factory injectors wiring plugs may require replacement or adaptors must be purchased separately.
8. Reconnect negative terminal on battery.
9. Turn the ignition the switch to the accessories position only at this point, wait two the three seconds and turn ignition back to off position. **DO NOT ATTEMPT TO START ENGINE.**
 - I. Repeat the above step and cycle the ignition three times.
 - II. Check all fittings, injector adaptors, fuel fittings for any signs of fuel leakage.
 - III. If there are any signs of leakage they must be corrected before proceeding on to the next step.
 - IV. If aftermarket injectors and/or fuel regulators have been installed ensure vehicle ECU has been adjusted to suit before attempting to start the engine.
10. If no signs of leakage has been found, then start the engine and be sure to check for any signs of leakage while engine is running. If no leakage is found on the final inspection then the installation is complete.

For more information or technical enquires

Contact: Aeroflow Performance on

Phone: (02) 8825 1999 Website: www.aeroflowperformance.com



For more information or technical enquires

Contact: Aeroflow Performance on

Phone: (02) 8825 1999 Website: www.aeroflowperformance.com