



BOOST CONTROLLER TEE

AF64-2096 & AF64-2096BLK Instructions

WARNING! These instructions must be read and fully understood before use of this boost controller. Failure to follow these instructions may result in poor performance, vehicle damage, personal injury or death.

The Aeroflow boost tee is easily adjustable from under the bonnet, simple fitment with included mounting bracket. 5mm barbs. W/G indicates the wastegate side. The opposite side is pressure in.



1. Aeroflow's boost tee is supplied with a mounting bracket for easy positioning in the engine bay.



2. The boost tee should always be fitted with the boost pressure backed off by winding the knob counter clockwise then slowly increased until you reach your desired boost pressure.



3. Once all adjustment are completed tighten the detent screw to fix in the final position.

